




1.) Prepare your bicycle helmet by taking the brim off - if it has one. Do this by pulling or unsnapping it from the anchor points. Don't worry - it'll go back on!



2.) Place the brim out of the way so you can clean the front of the helmet, where the brim used to be. Clean with rubbing alcohol swab or non filming mild soap. Let Dry.

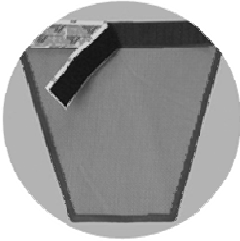

3.) Separate the velcro strips. Pull velcro apart.



4.) Peel the tape backing off the sticky side of the unmounted velcro strip.



5.) Apply the sticky side of this velcro to your helmet so the strip becomes centered over the leading edge.



6.) Velcro attached (front view).



7.) Attach the bug screen to your helmet. Bring both sides of the velcro together so the screen is mounted almost vertically.



8.) Bug screen attached vertically in the optimum angle.



9.) Centered and mounted properly protecting your face.



10.) Attach your brim, if you have one. It should fit snugly (sideview).



11.) Brim attached (frontview).
You're finished!



Need more help? Visit our
SUPPORT and FAQ pages at:
www.GBNpro.com - Thank you!